


## A SOLID CUT ABOVE

Electrical Wiring Diagram (ceiling path example)

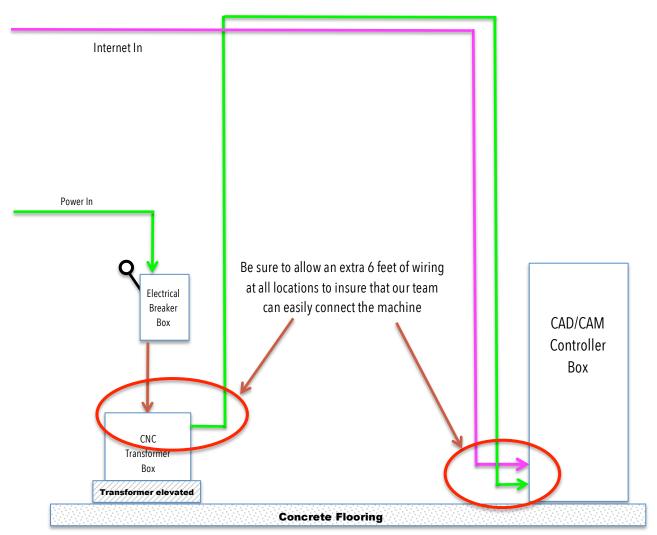

CNC Connection: #6 copper wire – gauge required throughout connection including ground
Run enough length from electrical breaker to wire transformer with ample wire to connect (6 feet)
From transformer, run wire to ceiling (conduit to code) then back down to CAD/CAM unit floor level
Provide enough wire at CAD/CAM box location (extra 6 feet) for wiring connection
Cat5 cable for internet connection to machine